
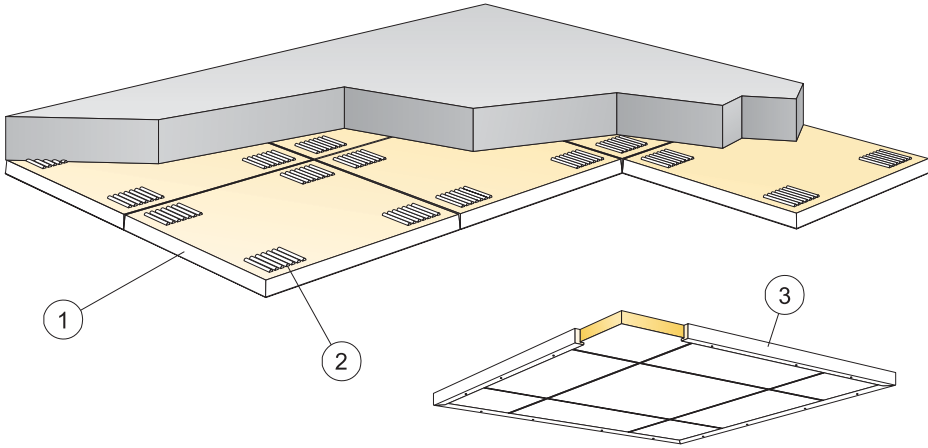


## Ecophon Master B

600x600

M113

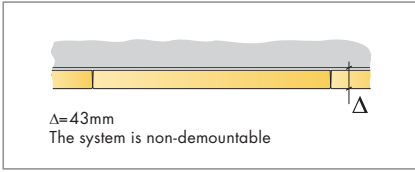



1. Ecophon Master B

2. Connect Absorber Glue



3. Connect Wood trim

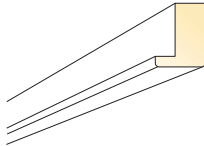




Connect Absorber glue



**x1**





**x1**

**Ecophon**<sup>®</sup>  
SAINT-GOBAIN

A SOUND EFFECT ON PEOPLE

[www.ecophon.com](http://www.ecophon.com)


1

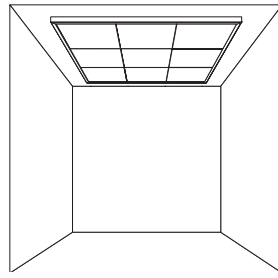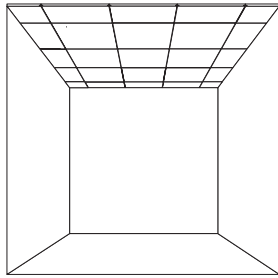





2




10



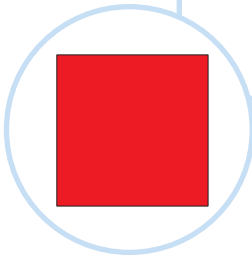


2

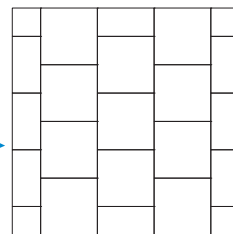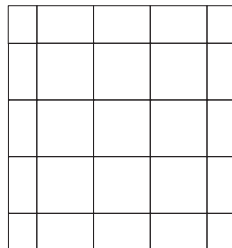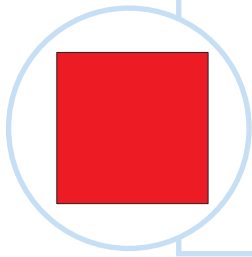
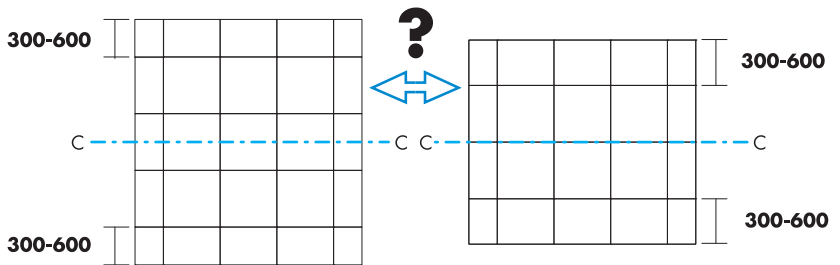



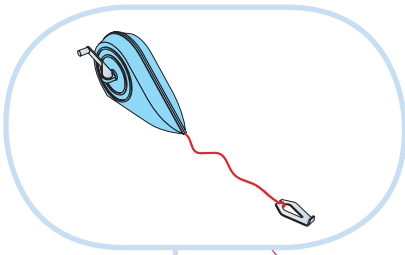


**3**



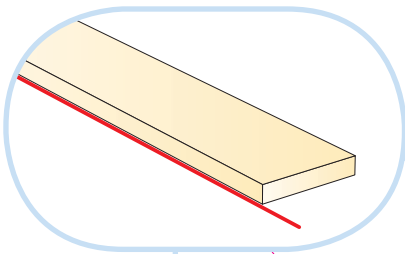
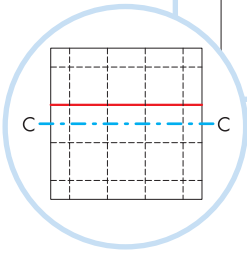
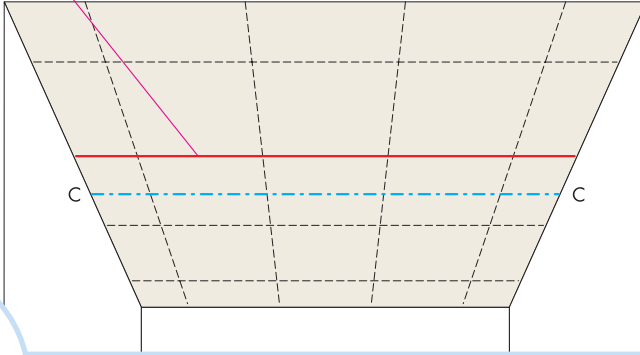


**4**



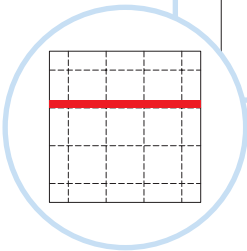
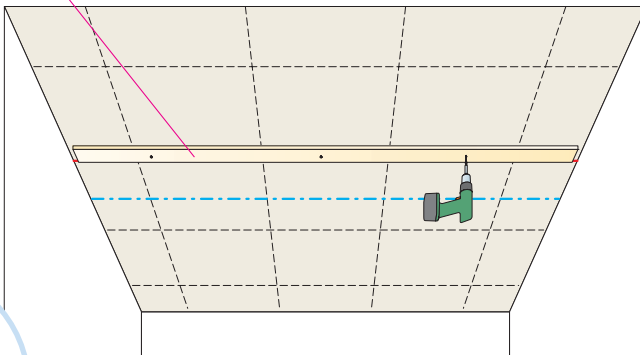


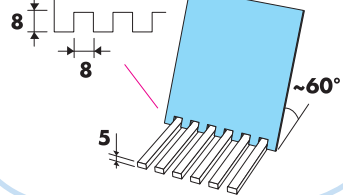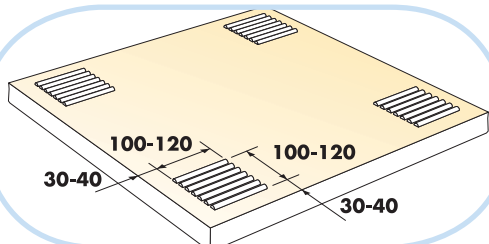


5

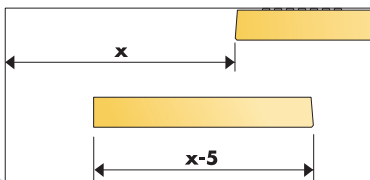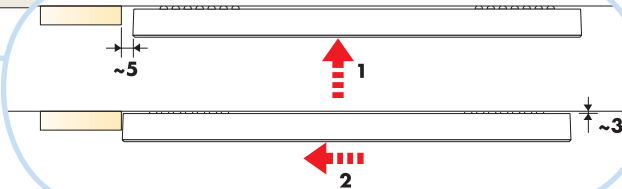
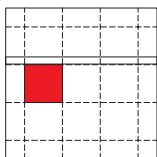
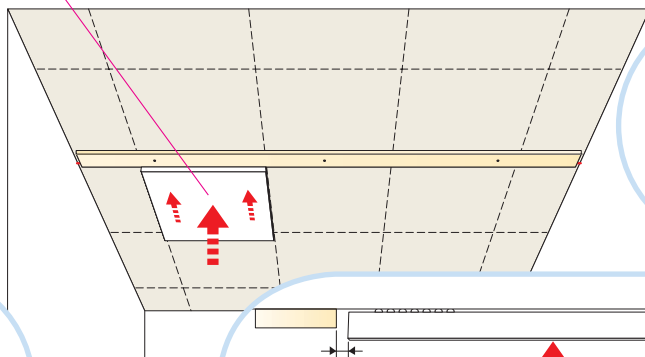


6

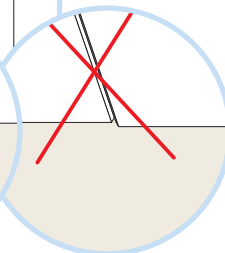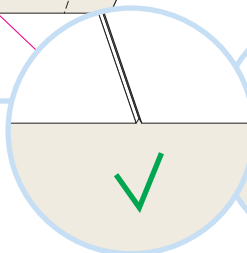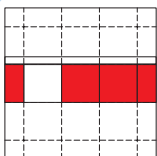
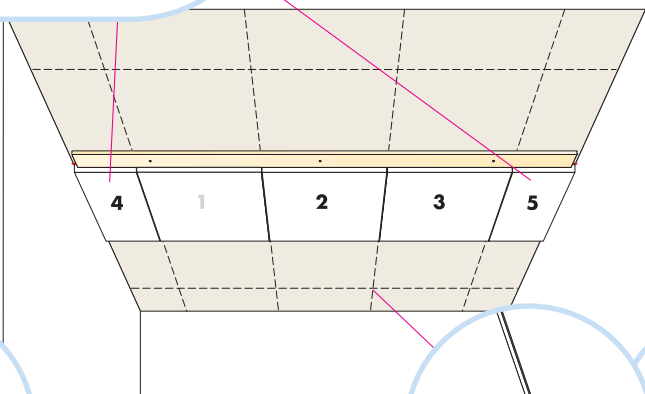


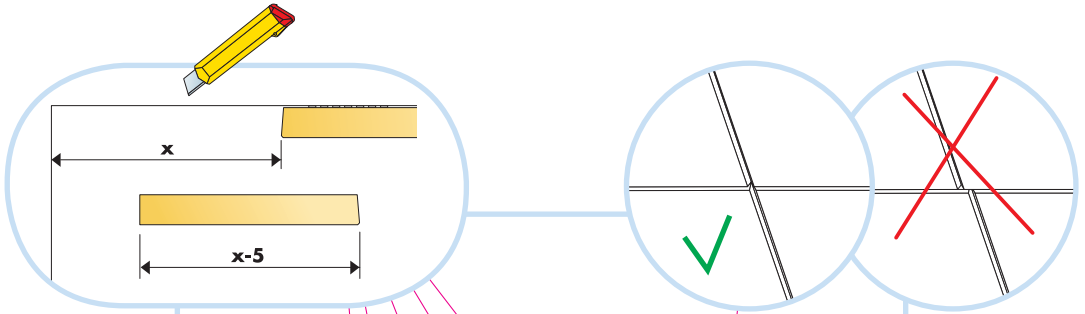



**7**

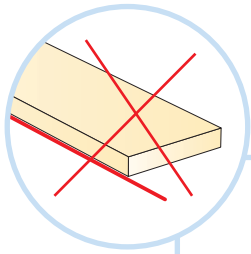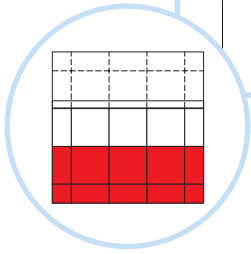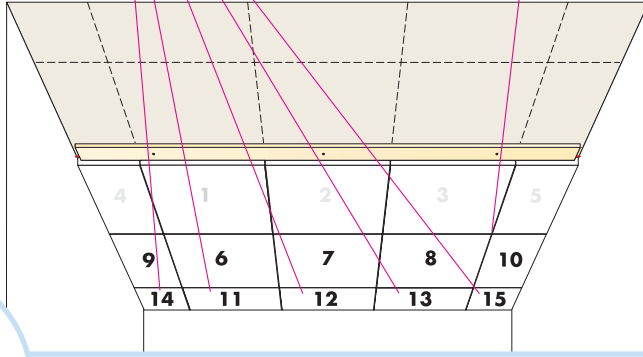





**8**

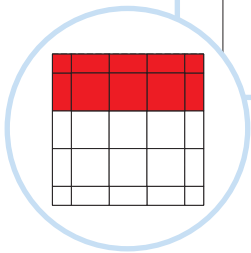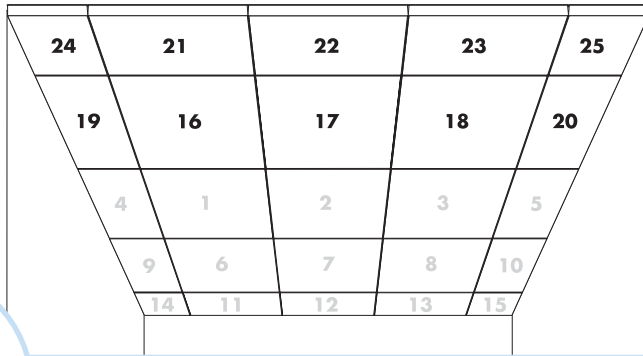




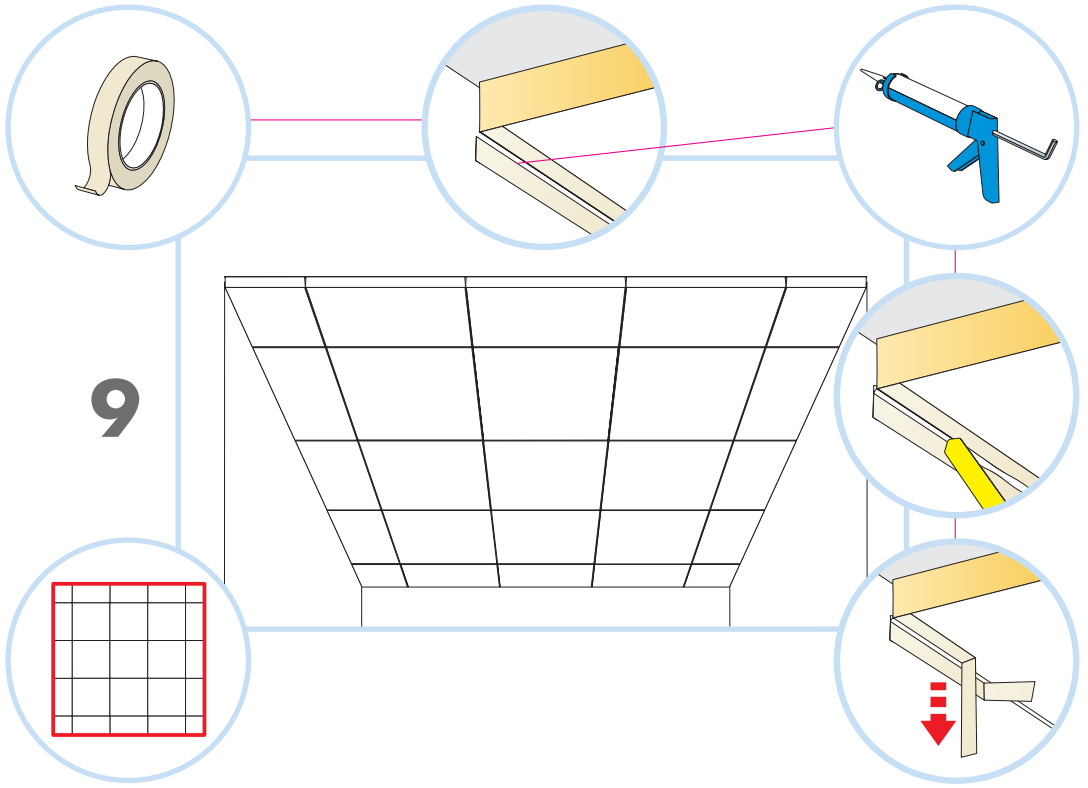


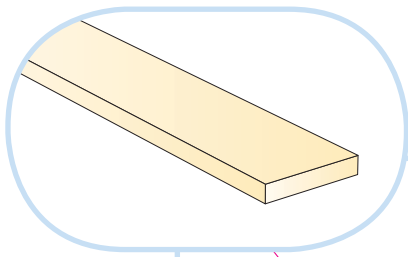

10




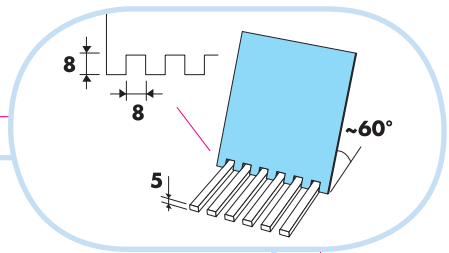
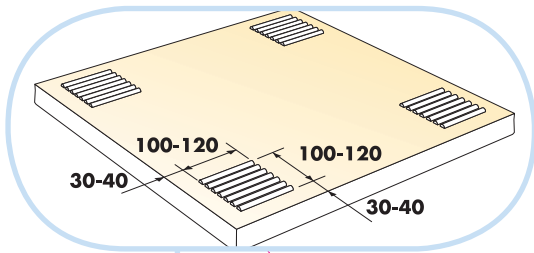
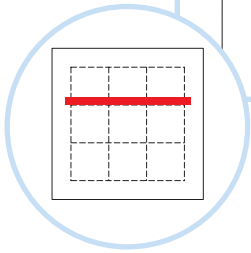
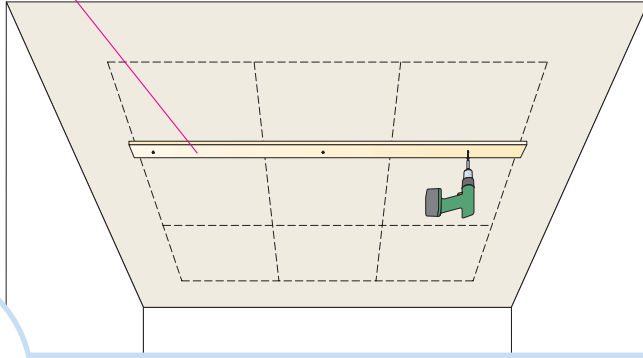


11

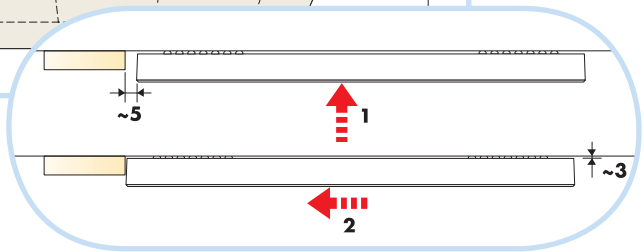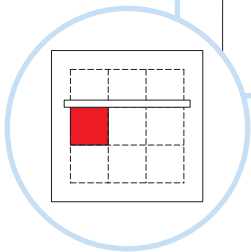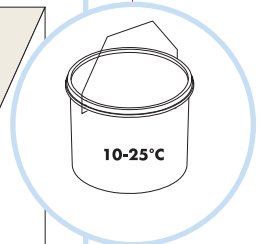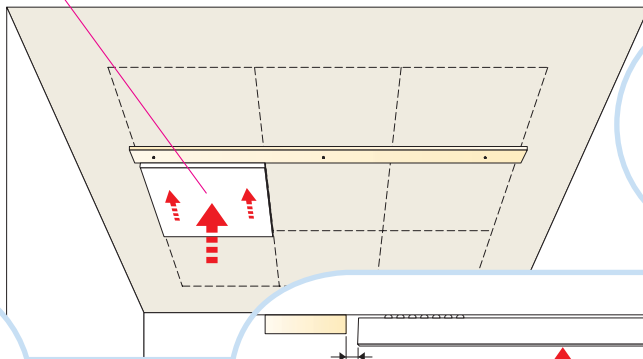



12

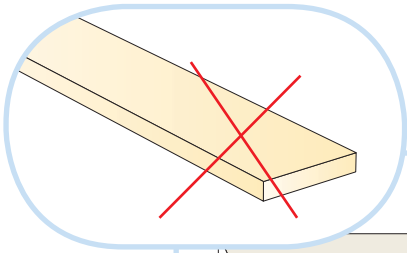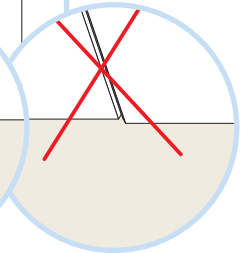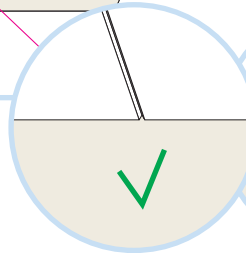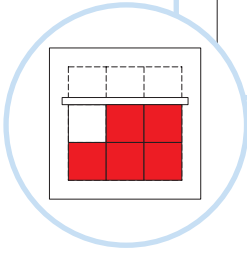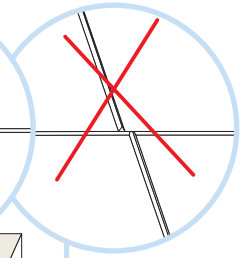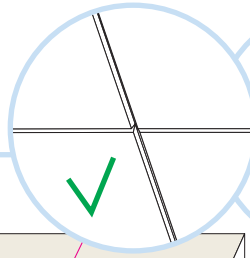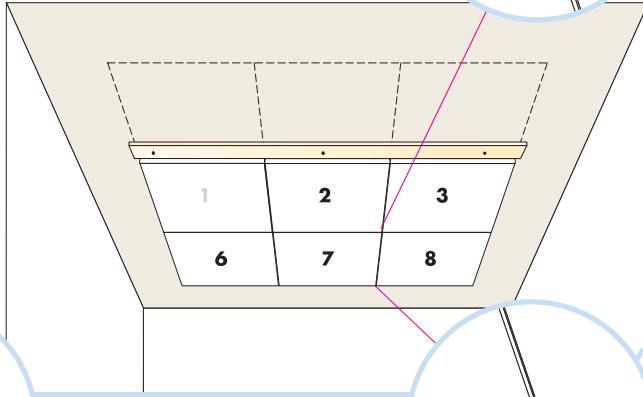

13

